
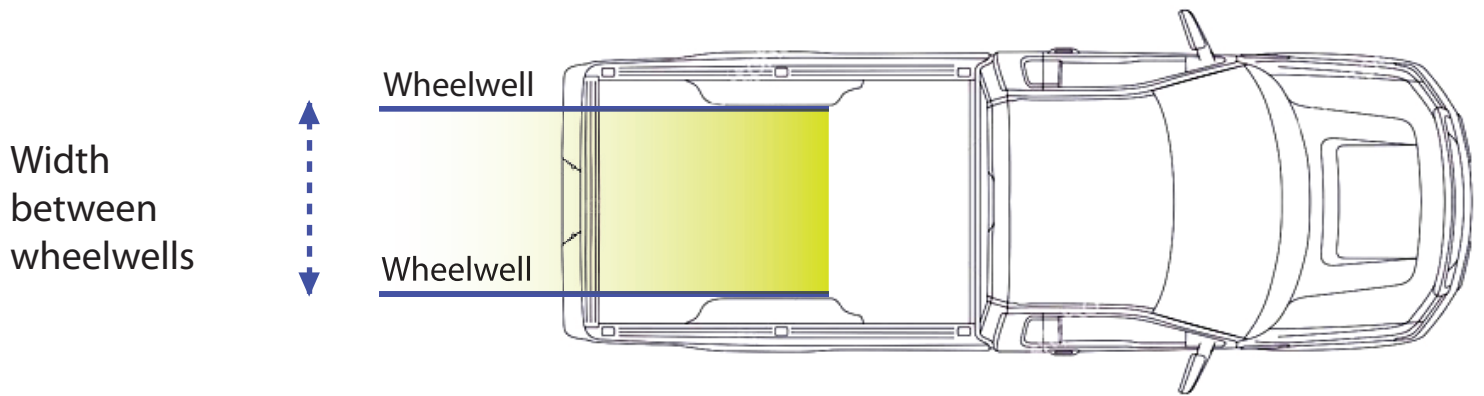




KIMBO™


Truck Fit Guide

Please measure your vehicle accordingly and compare to the camper dimensions on the next page. Generally, you want at least one (1) inch of clearance space between your top cab and sidewalls with the camper. We recommend two inches of clearance if you can.

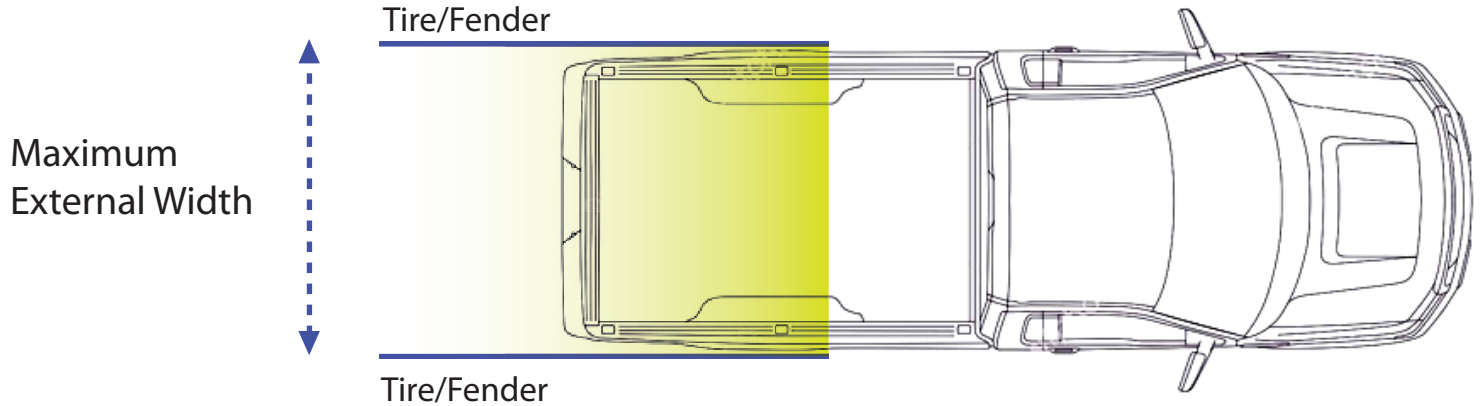

*All units = inches

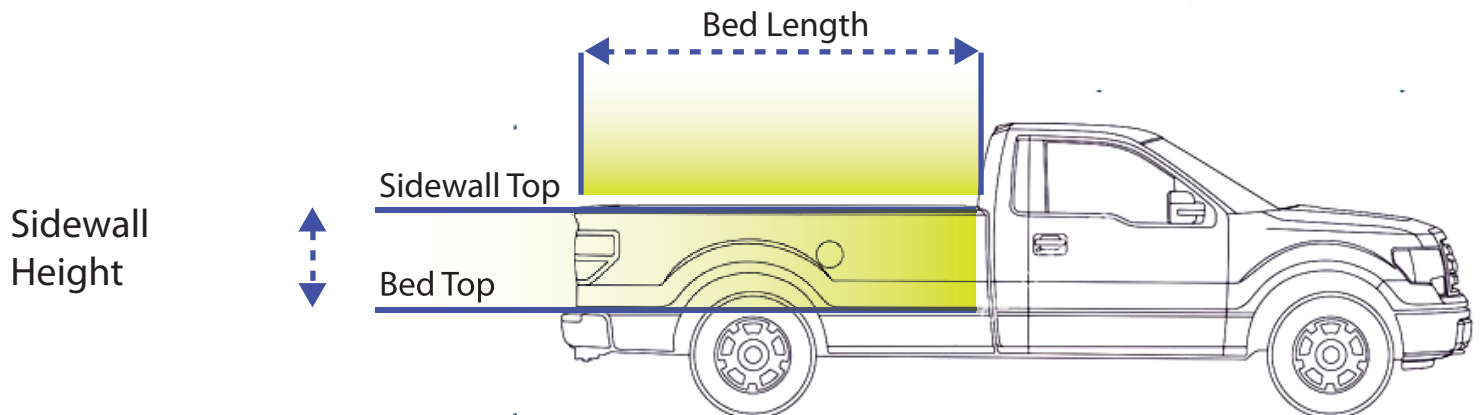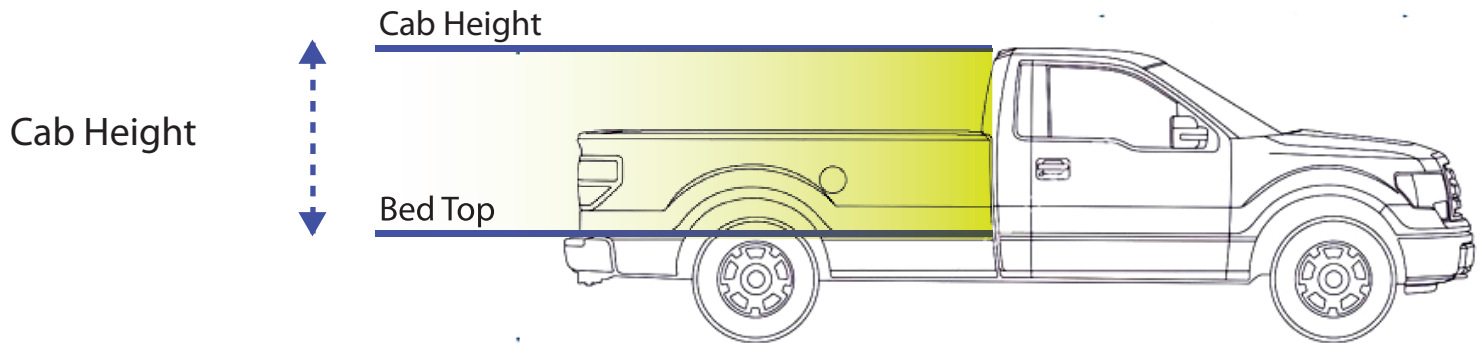


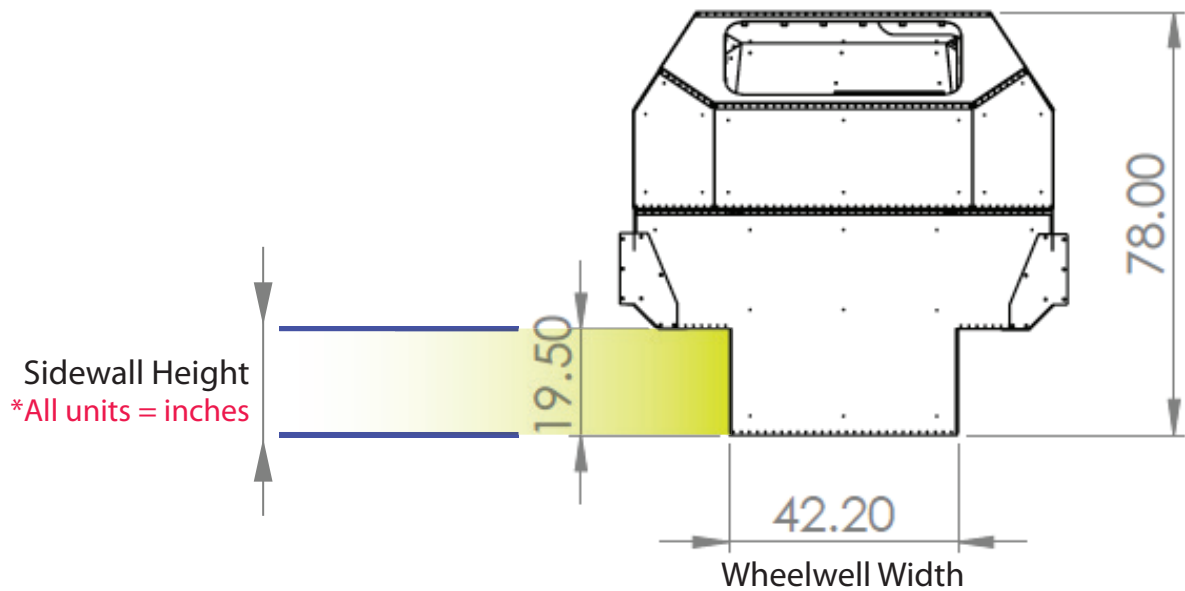


Camper Fit

The Kimbo camper was originally designed and built around the Toyota Tacoma, but will fit any truck with slight modifications. See description page for details.

We suggest for all camper users to install a rubber bed sheet to add friction. We recommend a stall mat, found at feed supply stores, but anything offering friction will work.

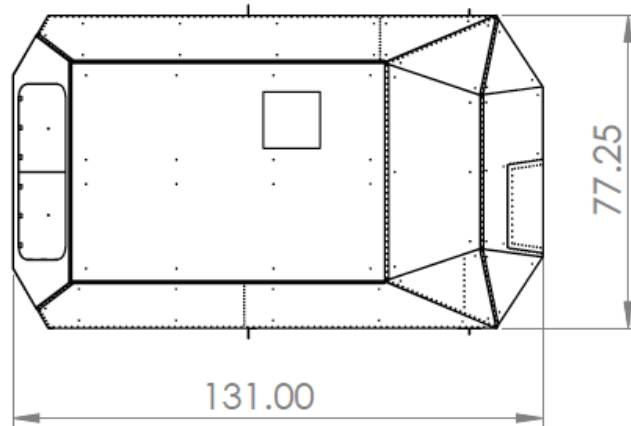

Cab Height Consideration:
Please remember to add
an extra one to three
inches for safe clearance.

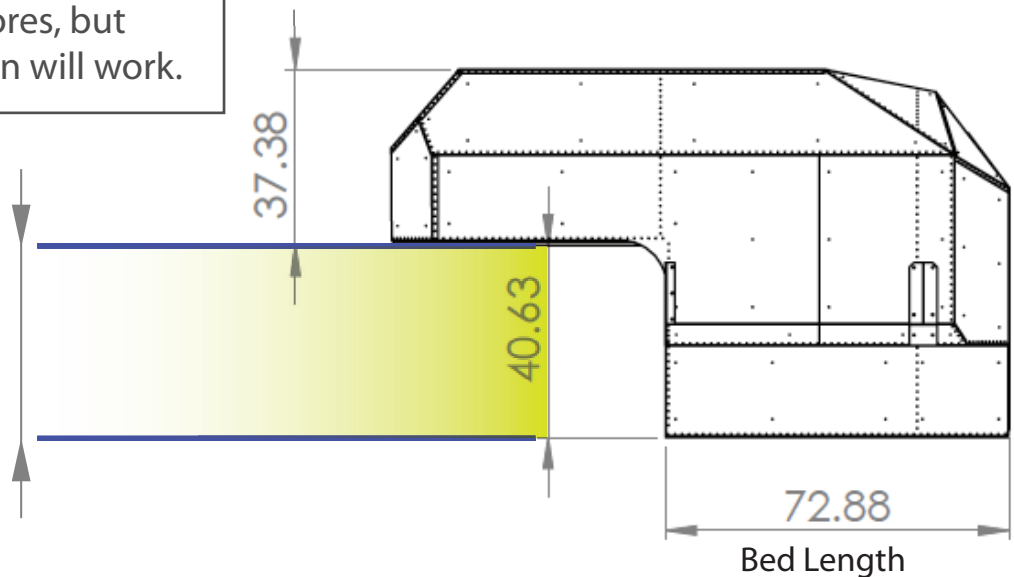

For Large Trucks


For a bed buffer platform, we make and provide one standard sized version out of 2x6s and plywood. Each weighs about 60lbs. These are strictly made for cab and/or sidewall height clearance to meet our requirement for camper pickup or delivery, for the trucks that lack the cab and/or sidewall clearance.

For most trucks, you will need to purchase extension plates for each jack stand, and install a bed buffer (we provide a basic wood platform for picking up your camper as stated above).


When determining if you should purchase extensions, consider the following measurements. You will want a few inches clearance to clear the width of your vehicle.

Extension Plates




*All units = inches

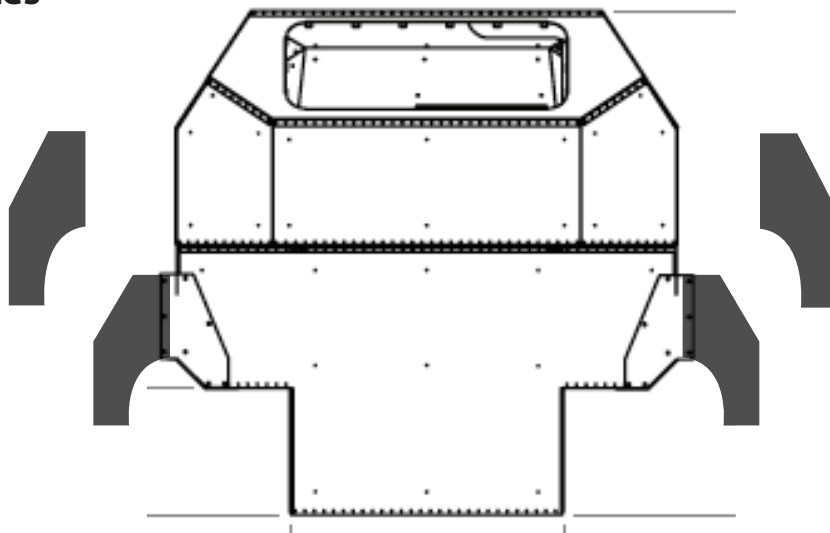

Platform (Bed Buffer) provided by Kimbo:


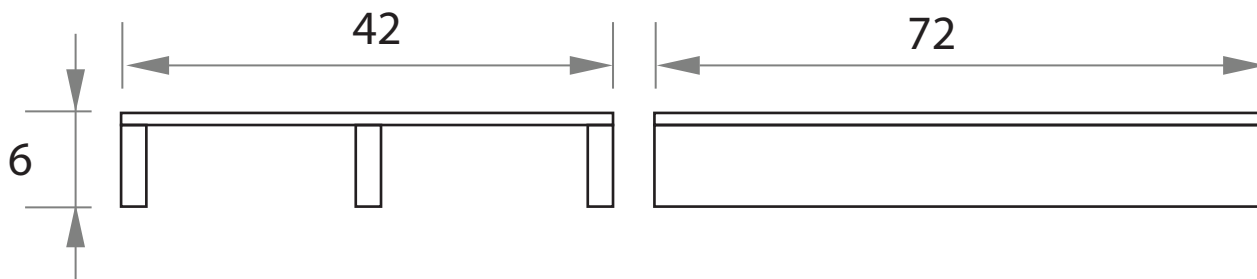


Without Extension Plates

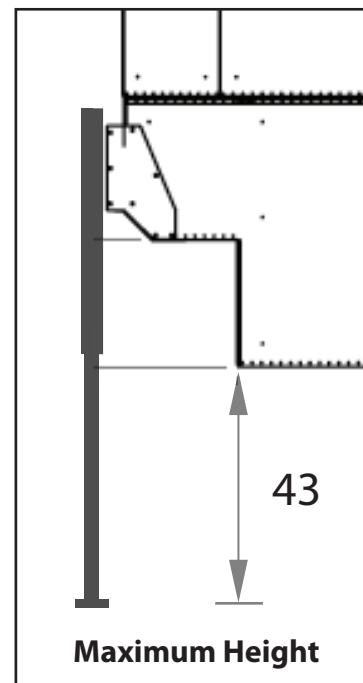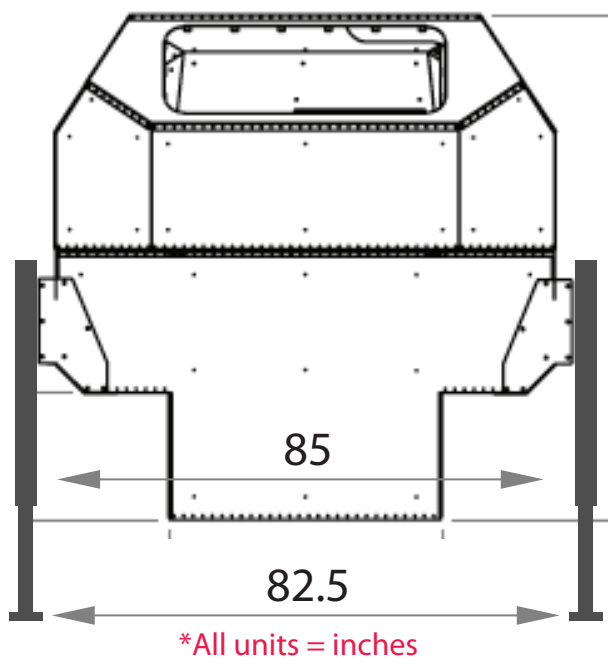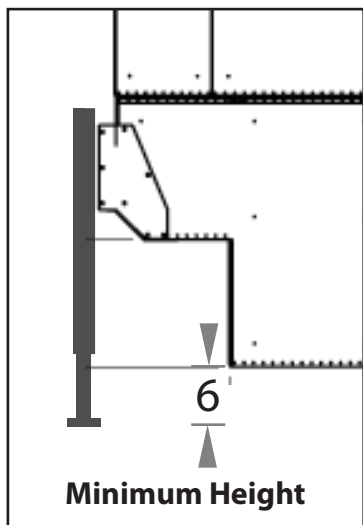

To determine if you should purchase extensions, consider the following measurements. You will need a few inches clearance to clear the width of your vehicle.

With Extension Plates

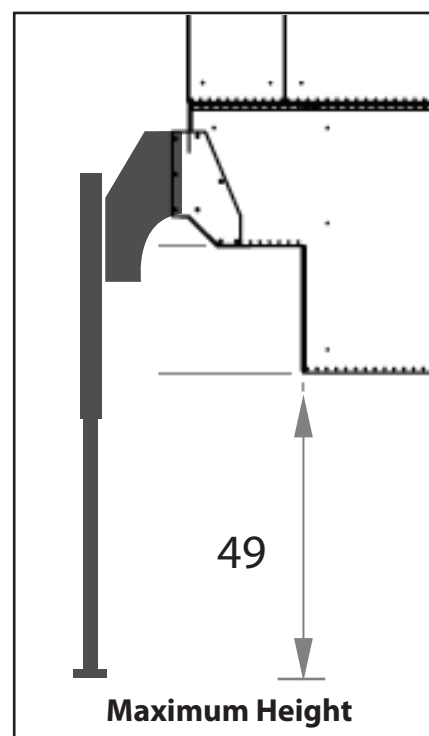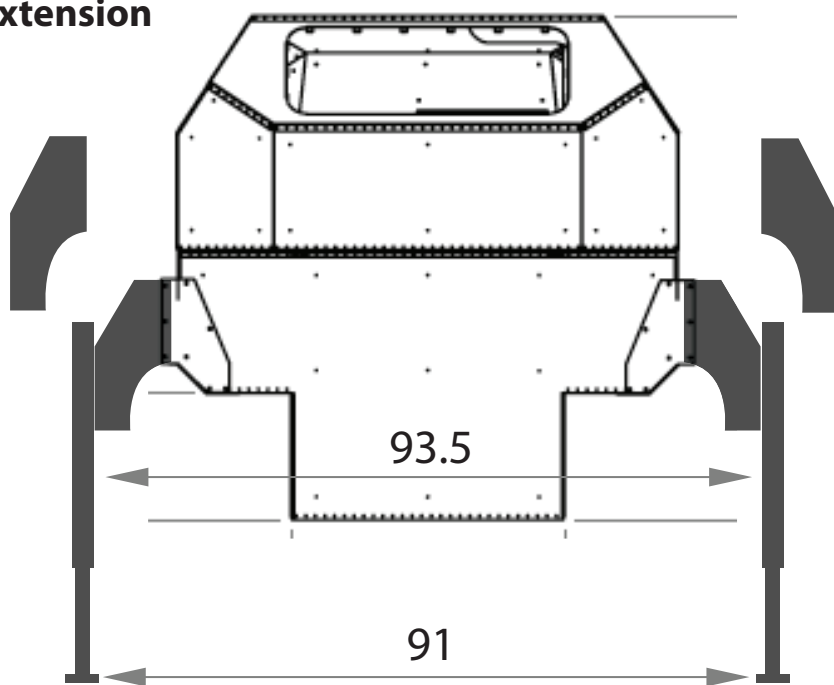



Kimbo on Short Bed Trucks

The Kimbo is compatible with 5' and 5.5' truck beds. We have installed a Kimbo on most truck generations post 2001. With 1st generation Tacoma trucks, the wheel well width is only 41". Kimbo customers with 1st generation Tacoma trucks have had to modify their wheel wells in order to make the Kimbo fit. We have installed a Kimbo on Nissan Frontiers, GMC Canyons, Ford Rangers, and Chevy Colorados too. The tailgate will need to be down and serves well enough as a small porch to step out onto. Many users remove the tailgate entirely, depending on their needs and preferences. If you want to remove your tailgate, it is best to remove it before traveling to the Bellingham factory in order to pickup your Kimbo for the first time.



Recommendations for tires and airbags remain the same with short bed trucks. Please refer to our downloadable guides on the Kimbo Campers official website.

Camper Pickup Checklist:

Check that your bed attach points are wide enough to safely hold 2 inch wide straps and are attached to your truck in corners which will not fit inside the dimensions of the footprint of the camper. We cannot accommodate alternate strapping methods, it is the customer's responsibility to cover this preparation step.

Toyota Tacoma

Remove the back bed liner bar, it is attached behind your cab window. Five (5) screws are fastened. Be careful with removal, the metal used in the screws is soft, and are lightly locked with threadlocker. If your Tacoma is a short bed, bar removal is optional, the camper will stick out of your tailgate anyway.

If your Tacoma is older than 2009, your wheelwell distance may be too narrow for the camper to fit inside without heavy modification to the wheelwells, so double check.

All other trucks

Please check for camper fit, if you require Extension Plates or a Platform, please add that to your order. Ensure that sharkfins and such will have enough clearance, about an inch at least. Generally with most trucks, you may not need to remove anything attached to your sidewalls to offer clearance for the camper.

Include the bed rubber or stall mat height in your calculations. We have them at our factory for an extra charge.

Note:

Please prepare your truck prior to your camper pickup date

Deliveries:

We do not offer a delivery service, unfortunately, but we have worked with customer-appointed third-parties. Please inquire with us, we may have more information to offer you a recommendation in this area.